



HAYWARD®

Remote Display

for Aqua Logic and Pro Logic

Owner's Manual

	<p>Contents</p> <p>Installation.....1</p> <p>Troubleshooting.....2</p>
-----------------------------------------------------------------------------------	-------------------------------------------------------------------------------

AQL-WW-P-4

**REGISTER
NOW**

to extend your
WARRANTY

see back of manual for details

Hayward Industries
 400 Connell Drive, Suite 6100
 Berkeley Heights, NJ 07922
 Phone: (908) 355-7995
www.hayward.com




COMPATIBILITY: This display/keypad is compatible with all Pro Logic and Aqua Logic P-4 systems. In addition, it is compatible with Aqua Logic PS-4 systems with datecodes 0311 and earlier running main software r1.04 or lower.

Installation

Mounting

The AQL-WW-P-4 Remote Control must be mounted indoors or in a weather protected area (rain should never hit the display/keypad). Up to 3 remote display/keypads can be installed. The display/keypad is designed to mount onto a standard electrical utility box (ideal for new construction) or can be mounted directly onto any wall surface. When selecting a location, note that the wire to the main unit must be less than 500 ft (160m) long. Follow the steps below:

1. Remove display/keypad baseplate from the cover by lifting up on the cover at the lower end of the keypad as shown below.
2. Screw the baseplate in the desired position (screws supplied by installer).

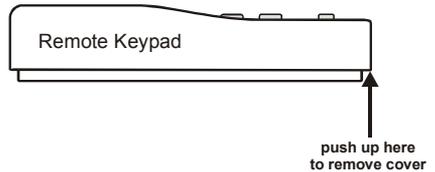


Wiring

The Pro Logic or Aqua Logic main unit can connect up to a maximum of 3 remote display/keypads.

Use four conductor cable (typically phone cable) to connect the remote control to the Pro Logic/Aqua Logic Control Center as shown below. The maximum wiring distance is 500 ft (160m). Note that the terminals on both the main unit and the remote display/keypad are numbered: Connect 1 to 1, 2 to 2, etc. Refer to diagram below.

If multiple remote controls are installed: Never connect more than 2 wires to any terminal block. Two remotes can be wired back to the Pro Logic/Aqua Logic main unit or the second display/keypad (and third, if applicable) can be "daisy chained" with one display/keypad wired to the next. The maximum wire run from the main unit to the furthest remote display/keypad is 500 ft (160m).

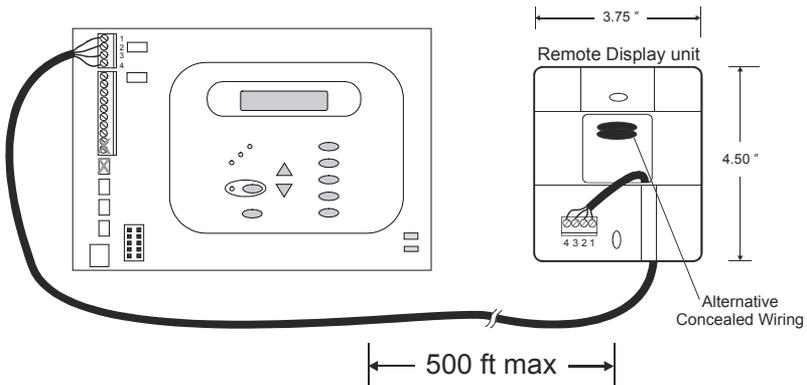



HAYWARD®

Operation

Refer to the Pro Logic or Aqua Logic Operation Manual for complete AQL-WW-P-4 operating instructions.

Start-up

When power is turned on, the display backlight should immediately illuminate and the following display should appear for a few seconds:



The x.xx is the software revision level for this particular display/keypad.

Troubleshooting

1. Display/keypad not functioning (no display, no LEDs illuminated)

If the display/keypad located on the main unit is working correctly, the most likely cause is that wires 1 and 4 are either open circuited or reversed. Check wiring. If none of the displays are working, check that 120V power is being applied to the main control and that the 3A fuse (violet) is not blown.

2. “Communication Error” displayed

If the display/keypad on the main unit is working correctly, the most likely cause is that wires 2 and 3 are either open circuited or reversed. If all the display/keypads are showing “Communication Error”, unplug the remote display connector at the main unit and check the main display. If the main display works properly, the problem is in the wiring or one of the remotes is defective. If the main display keypad still does not work, the main PCB will have to be replaced.

3. Display backlight turns off after a period of time

The display backlight should always illuminate when you press any key on the unit. If it turns off after a period of time, you can stop this by pressing the menu key (possibly multiple times) until “Settings Menu” appears. Next press the “<” or “>” key (possibly multiple times) until “Display Light” appears. At this point, pressing either “+” or “-” will allow you to select either “Always On” or “Off after 60 sec”. After you have selected the desired operation, press the “Menu” button to lock in your setting. Note that this selection applies to this display/keypad only. Repeat the process for each display/keypad in the system.

4. Display backlight always on


The display backlight should always illuminate when you press any key on the unit. If it remains on after 60 seconds have elapsed since the last button push, you can stop this by pressing the menu key (possibly multiple times) until “Settings Menu” appears. Next press the “<” or “>” key (possibly multiple times) until “Display Light” appears. At this point, pressing either “+” or “-” will allow you to select either “Always On” or “Off after 60 sec”. After you have selected the desired operation, press the “Menu” button to lock in your setting. Note that this selection applies to this display/keypad only. Repeat the process for each display/keypad in the system.

90 DAY EXTENDED WARRANTY* REGISTER WITH YOUR SMARTPHONE

— PROTECT YOUR INVESTMENT IN 2 EASY STEPS —

1. TAKE A PHOTO

Take a photo of the camera icon

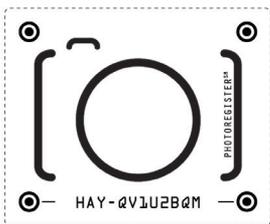

2. SEND IT IN

Send it in using one of the methods below



SMARTPHONE

Text a photo of the camera icon to **71403**

OR



ONLINE

Visit Hayward.com/Warranty

OR



MESSENGER

Send photo to **photoregister**

*Extended warranty is in addition to applicable product warranty and is for parts only, labor not included.

Need help? Visit photoregister.com/help or text HELP to 71403.

For further information or consumer
technical support, visit our website at
www.hayward.com



HAYWARD®



Hayward is a registered trademark and Aqua Logic and Pro Logic are trademarks of Hayward Industries, Inc. © 2019 Hayward Industries, Inc.

All other trademarks not owned by Hayward are the property of their respective owners. Hayward is not in any way affiliated with or endorsed by those third parties.

USE ONLY HAYWARD GENUINE REPLACEMENT PARTS