






OVERRIDE MODE

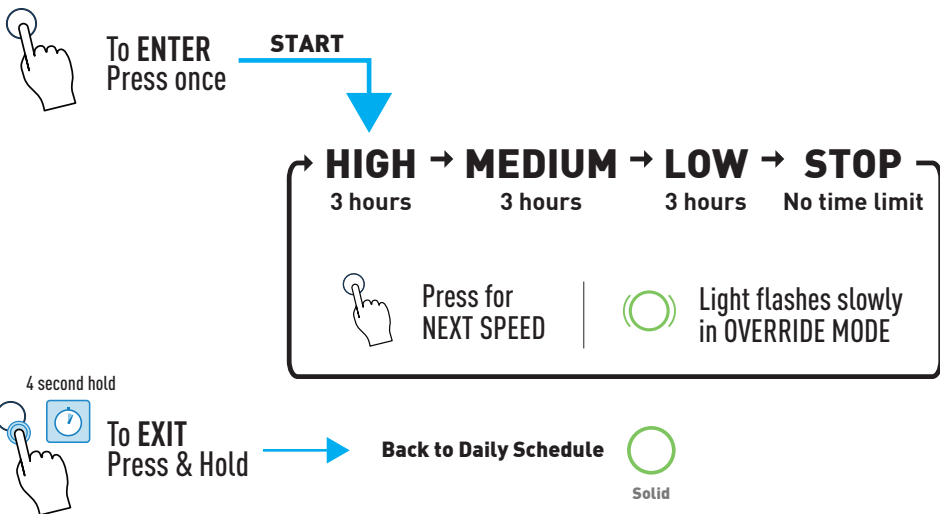

WIRING INSTRUCTIONS

Hazardous Voltage: Always turn off power at the circuit breaker before wiring. The pump can be wired to 230 VAC (factory default) or 115 VAC supply. Move the jumper to the corresponding input voltage as shown.

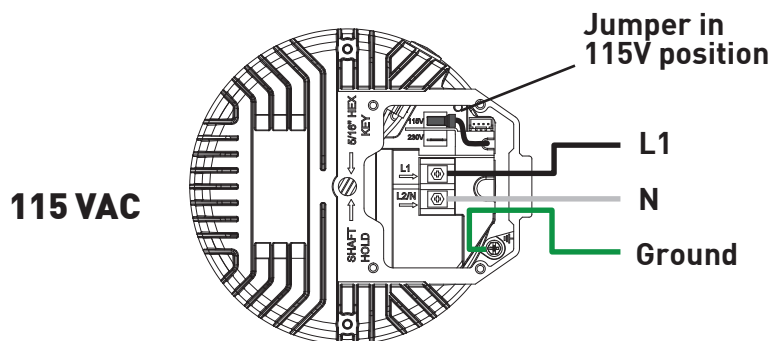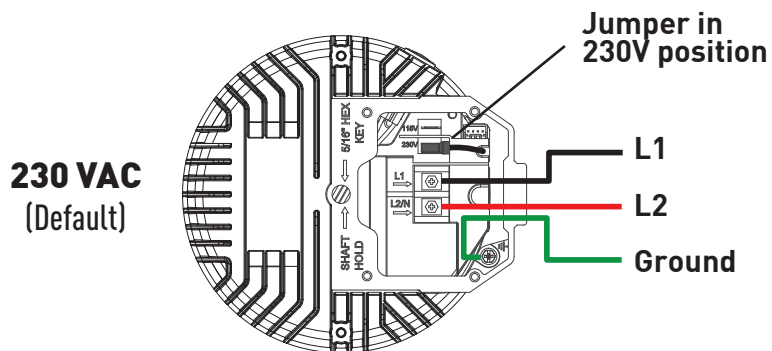

XE Pump Series


TriStar® XE | MaxFlo® XE | Super Pump® XE

QUICK START GUIDE



For detailed information about XE Series Pumps, scan this QR code

SIMPLE BUTTON PROGRAMMING

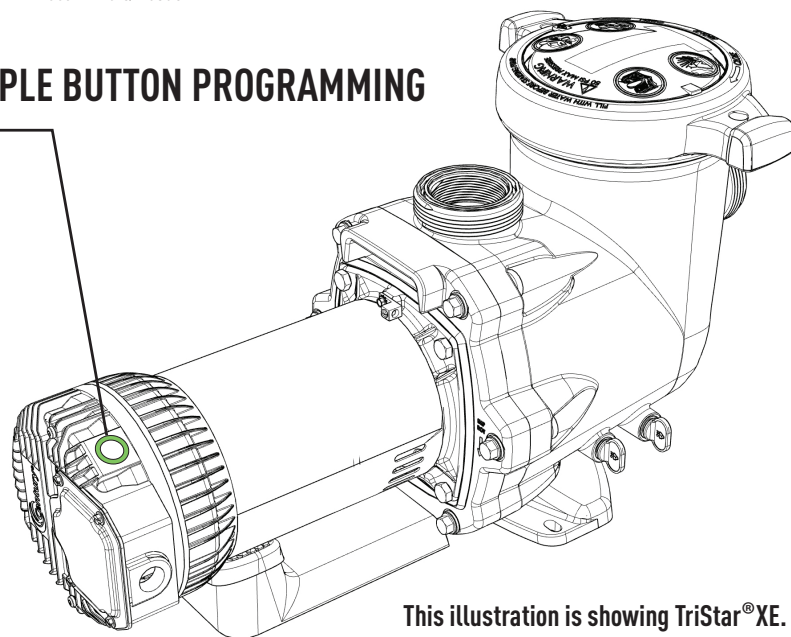

Energy Efficient



Variable Pump Speed



Programmable

PUSH BUTTON



SHORT PRESS

Override mode /
Choose pump speed

4 second hold



PRESS & HOLD

Program mode /
Save & continue

STATUS LIGHT



SOLID

Daily Schedule Only



QUICK FLASHING

Program Mode Only
Number of flashes indicates
interval



SLOW FLASHING


Override Mode Only




3 RAPID FLASHES

Confirms press and hold
successful

DAILY SCHEDULE

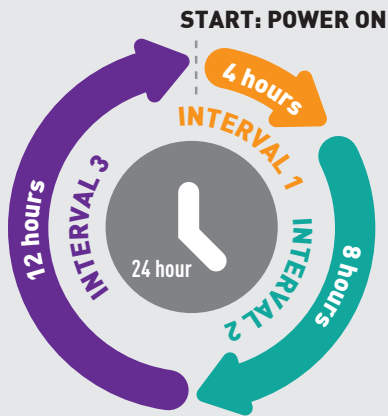

CHOOSE PUMP SPEED

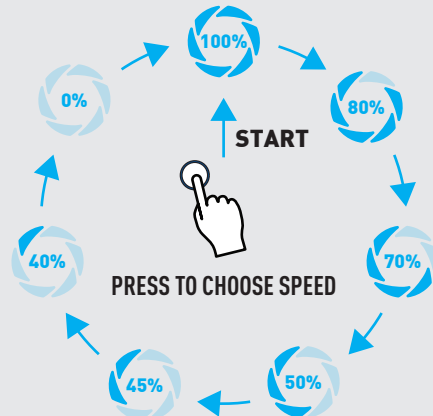

HOW TO PROGRAM THE DAILY SCHEDULE


To ENTER PROGRAM MODE



Back to Daily Schedule



Solid

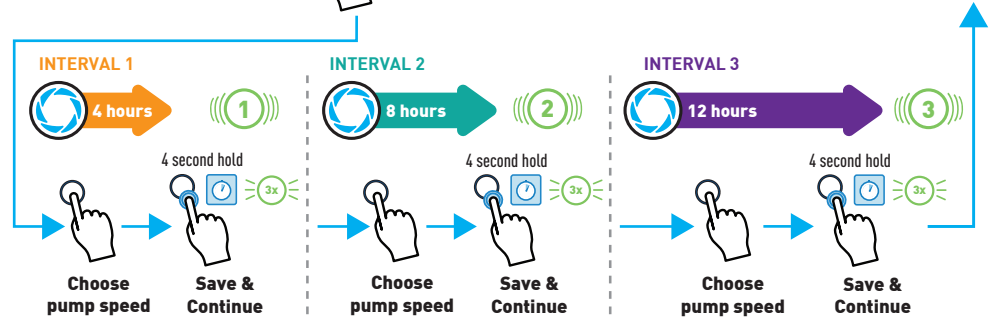

PROGRAMMING EXAMPLES

100% for 24 hours

INTERVAL 1



1



2



3



4



5



INTERVAL 2



INTERVAL 3



Press & Hold

Press one time

Press & Hold

Press & Hold

Press & Hold

80% for 4 hours / 40% for 8 hours / 0% for 12 hours

INTERVAL 1



1



2



3



4



5



6



7



INTERVAL 3



Press & Hold

Press two times

Press & Hold

Press six times

Press & Hold

Press seven times

Press & Hold

DEFAULT DAILY SCHEDULE 50% pump speed for all 3 intervals

INTERVAL 1



50% Pump speed

INTERVAL 2



50% Pump speed

INTERVAL 3



50% Pump speed

The pump will start at 100% speed for 8 minutes to prime