



Quick Reference Guide

Universal ColorLogic & CrystaLogic

Model	Input (Volts, Amps, Watts)
LPC	14 VAC, 60 Hz, 5 A, 70 W
LS	14 VAC, 60 Hz, 2.5 A, 35 W
LPW/LPL	14 VAC, 60 Hz, 5.4 A, 75 W

Model	Equivalent Brightness	Lumens
LSL	100W	1000
LPL	300W	3250
LPW	500W	4900

Model	Input (Volts, Amps, Watts)
LAC, LAW	14 VAC, 60 Hz, 23 W
LYC, LYW	14 VAC, 60 Hz, 13 W

Model	Equivalent Brightness	Lumens
LAC, LAW	100 W	1100
LYC, LYW	60 W	600



ColorLogic – Switched LEDs & OmniDirect (Lights built after June, 2018)


- | | | |
|------------------------|----------------------|-----------------------|
| 1. Voodoo Lounge (S) | 10. Vivid Violet (F) | 19. Orange (F) |
| 2. Deep Blue Sea (F) | 11. Sangria (F) | 20. Gold (F) |
| 3. Royal Blue (F) | 12. Twilight (S) | 21. Mint (F) |
| 4. Afternoon Skies (F) | 13. Tranquility (S) | 22. Teal (F) |
| 5. Aqua Green (F) | 14. Gemstone (S) | 23. Burnt Orange (F) |
| 6. Emerald (F) | 15. USA (S) | 24. Pure White (F) |
| 7. Cloud White (F) | 16. Mardi Gras (S) | 25. Crips White (F) |
| 8. Warm Red (F) | 17. Cool Cabaret (S) | 26. Warm White (F) |
| 9. Flamingo (F) | 18. Yellow (F) | 27. Bright Yellow (F) |

(S) = Show, (F) = Fixed Color, = Only available in OmniDirect mode

Quick Reference Guide: Changing Modes

Changing modes (ColorLogic)

- Turn ON lights, then OFF for 11-15 seconds (repeat 3 times)
 - Turn lights back ON, lights should blink 1 of 5 colors (indicating light's mode)
1. Universal ColorLogic (red and white)
 2. ColorLogic 4.0 (green and white)
 3. ColorLogic 2.5 (blue and white)
 4. Pentair SAM (white and white)
 5. Omni Direct (purple and white)

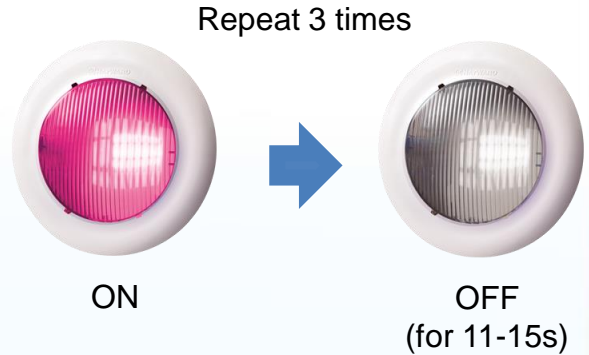

Note: To toggle light modes turn lights OFF then back ON immediately, repeat until desired mode is selected. Turn off for two minutes to save.

How to reset back to UCL mode

- Turn ON lights, then OFF for 11-14 seconds (repeat 4 times)
- Turn lights back ON, lights will blink red and white (indicating the lights are in UCL mode)
- Turn lights off for two minutes. This will save the lights in UCL mode.

How to change light(s) modes in the OmniLogic service menu. (Requires OmniLogic firmware R3.2.0 and above)

Step 1: Place OmniLogic into service mode.

Step 2: Press the light mode button(right)

Step 3: Select pool light location(below)


Step 4: Choose the light mode you want(bottom right)

Step 5: Exit service mode

Step 2



Step 3

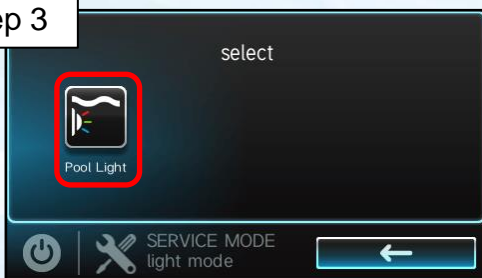

Step 4

