

DuraNiche™ SERIES

UNDERWATER LIGHTING FIXTURE HOUSINGS

MODEL NO. SP0600U-FOR CONCRETE POOLS
MODEL NO. SP0601U-FOR CONCRETE POOL/SPA
MODEL NO. SP0607U- FOR VINYL/FIBERGLASS POOLS




Approved for use by NYC
Department of Buildings

INSTALLATION INSTRUCTIONS

Unlike metallic niches, DuraNiche™ niches are injection-molded of PVC for superior performance, non-corrosive durability and plumbing versatility - plus the lowest installed cost.


The ability to accept PVC over expensive metal conduit enables DuraNiche™ to offer true bottom line savings in materials, as well as time to install.

DuraNiche™ comes in three models for concrete/gunite pools, vinyl/ fiberglass pools, or for concrete/gunite spas. When paired with a Hayward AstroLite™ AstroLite II™ or ColorLogic® LED light fixture, you have the best quality and value in a lighting system available anywhere. DuraNiche Models, SP0600U, SP0601U and SP0607U are furnished with (2) conduit fittings (reducer and elbow/coupling) to allow for specific installation requirements. Models SP0600IMG and SP0601IMG are not supplied with conduit fittings but installation is otherwise identical.

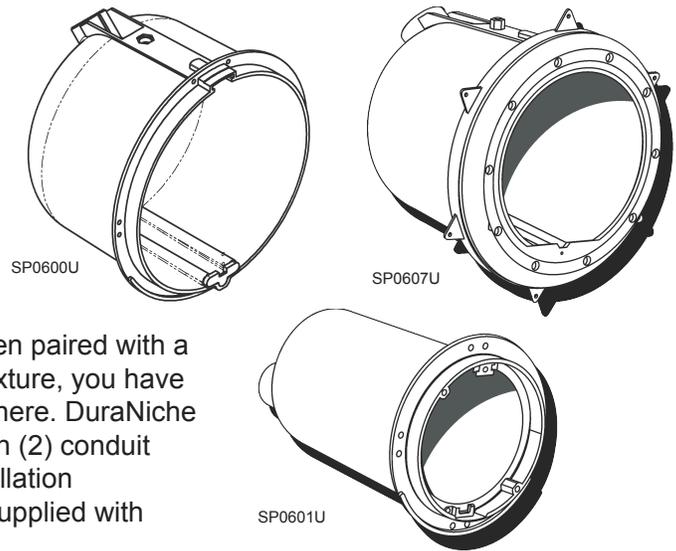

IMPORTANT INFORMATION REGARDING ALL MODELS

1. DuraNiche™ underwater lighting fixture housings are Underwriters Laboratories (UL) Listed under File E 39338- Category WBDT. These niches are New York City (NYC) Bureau of Electrical Control approved for use with low voltage (12 volt) lighting fixtures. UL Listed for fresh water and complies with National Electrical Code [NEC].
2. DuraNiche™ model SP0600U and SP0607 underwater fixture housings are UL Listed only for use with Hayward Submersible Light Fixture Series SP0520LED, SP0540, SP0570, SP0580 and SP0580S. Model SP0601 Underwater Light Fixture Housing (Niche) is UL Listed for use with Hayward Submersible Light Fixture Series SP0530LED and SP0590.
3. All DuraNiche™ underwater lighting fixture housings must be installed in compliance with Article 680 of the National Electrical Code (NEC) or other applicable electrical codes and with any applicable building codes. Article 680 requires that light fixtures be installed with the top of the fixture lens at least 18 inches below the normal water level of the pool or spa.
4. Most DuraNiche™ underwater lighting fixture housings are provided with two (2) Conduit Fittings. A 1" trade size -45° sweep elbow/coupling is provided for the purpose of directing the conduit pipe towards the SP0680/ SP0681 Listed Junction Box location and connecting the conduit pipe to the 45° sweep elbow. A 1" - 3/4" reducer bushing is provided to permit the use of 3/4" conduit pipe. These conduit fittings must be cemented to the fixture housing (niche), field supplied conduit pipe and to other conduit fittings using approved PVC primer and cement.
5. All DuraNiche™ underwater lighting fixture housings are provided with a combination bonding/grounding connector. The outside connection is the bonding connector as required by Article 680-26 of the NEC. The NEC requires that the bonding wire be AWG 8 or larger. Local codes may require a continuous loop and may require that the bonding point on the fixture housing (niche) be encapsulated. The inside connection is the grounding connector as required by Article 680-23B of the NEC. The NEC requires that where a nonmetallic conduit is used, an AWG 8 insulated copper conductor be installed in this conduit. This conductor is to be connected to the niche grounding connector. The connector and wire termination must be encapsulated in 3M Inc. Scotch Cast Wet Niche Potting Compound No. 2135 (UL File E130394) or equivalent to protect such connection from the possible deteriorating effect of pool water.
6. All DuraNiche™ niches are equipped with Internally-threaded connection for pressure testing of conduit line before installing light.

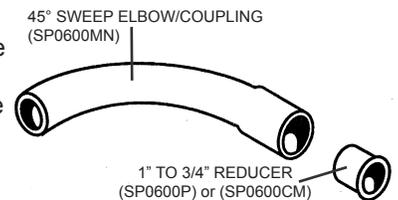

SAVE THESE INSTRUCTIONS

USE ONLY HAYWARD GENUINE REPLACEMENT PARTS

INSTALLATION INSTRUCTIONS FOR SP0600U AND SP0601U

FEATURES COMMON TO SP0600U AND SP0601U- FOR CONCRETE

1. 3/4" set-back plaster flange with tie-off holes to secure to rebar and assure positive positioning during guniting.
2. Unique 90° ledge at the flange bottom prevents "slumping" during plastering.
3. Niche cover (see back page) included with each niche, protects the niche and mounting threads during guniting.
4. The SP0601U small diameter niche has extra space for easy coiling and storage of the relamping cord.

Models SP0600U (Pool) and SP0601U (Spa) Underwater Lighting Fixture Housings are intended for installation in pools or spas with floors and walls formed of gunite or concrete (shotcrete) with a concrete reinforcing bar (rebar) frame. Gunite is a mixture of Portland Cement and sand while shotcrete is a high strength (4000 psi) concrete utilizing Portland Cement and small size aggregate.

The outside shape of the pool or spa is formed from SteelTek or other suitable material. In some cases, the excavated dirt wall will serve as the outside form. The inside wall of the pool or spa is formed from rebar that is bent to the desired shape (See Illustration A). The distance between the outer and inner wall is called the beam and is typically 8 to 12 inches. Rebar steel should be set at 10" for a 12" beam and 8" for a 10" beam. The distance between the niche flange and the outer wall should be the beam dimension. At all points where the rebar crosses, tie wire is used to connect the rebar securely.




1. Position the Model SP 0600U (Pool) or SP 0601 U (Spa) between adjacent rebars such that the niche is held on four sides by sections of rebar. At the time the niches are installed it may be necessary to add sections of rebar or move existing sections to one side or another in order to insure that the niche is held securely. (see illustration B) The brass/bonding connector must be located at the 12 o'clock position (top center).

THE NEC REQUIRES THAT THE TOP OF THE LIGHT LENS BE AT LEAST 18 INCHES BELOW THE WATER LEVEL EXCEPT WHEN THE LUMINAIRE IS INSTALLED IN AN AREA OF THE SWIMMING POOL THAT IS NOT USED FOR SWIMMING AND THE LENS IS ADEQUATELY GUARDED TO KEEP ANY PERSON FROM CONTACTING IT. BE SURE TO POSITION NICHE SO THAT YOU COMPLY WITH THIS REQUIREMENT. SOME INSTALLERS POSITION NICHE 24 INCHES BELOW ANTICIPATED WATER LEVEL TO AVOID ANY INSPECTION AUTHORITY ISSUES WITH THIS REQUIREMENT.

2. Once the niche(s) has been securely positioned (wedged) in the rebar it must be securely tied to the rebar with tie wire. Before tying niche in place make certain that niche is (vertical) plumb, and square to the form and that top of niche (where retaining screw is located) is at highest point at the 12 O'Clock position. The flanges of Niche Models SP0600U and SP0601U are provided with .187" diameter holes through which tie wire may be routed to facilitate securing the niche to the rebar. Tie wire should also be wrapped tightly around the outer circumference of the niche and then tied to the rebar. Once the niche is tied in place confirm that it is still plumb and that the distance from the outer wall to the niche flange is the correct beam dimension

NOTE: The rebar will be approximately 2 inches from where the inside finished surface of the pool will be. You must be sure to leave approximately 2" between the DuraNiche™ flange and the rebar (see illustration C)

3. After attaching the niche to the rebar of the pool wall and cementing conduit and conduit fittings in place and connecting the #8 AWG bonding wire to the bonding connector as described, install the provided DuraNiche™ Cover. The niche cover must be installed in order to prevent gunite or concrete from entering the inside of the niche during the pouring/shooting process. Cover should be left in place until the light is installed in the niche. (see illustration C)
4. The outside bonding connection must be inspected before the concrete/gunite, pouring/shooting operation. Follow applicable codes. It is also necessary to keep concrete or gunite from hardening on the outer edge and flange of the niche during pouring/shooting.
5. Once the concrete/gunite has completely dried, the niche is ready to be "plastered". Plaster is typically a mixture of white Portland Cement and marble dust along with some pigment chosen to give the pool water the desired color. The "plaster" is applied about 1" thick in the area surrounding the niche. The distance between the front edge and the flange of the niche is filled with plaster.

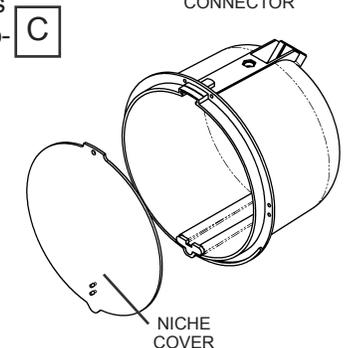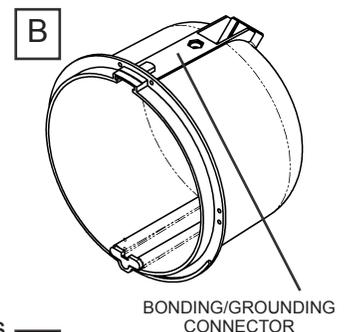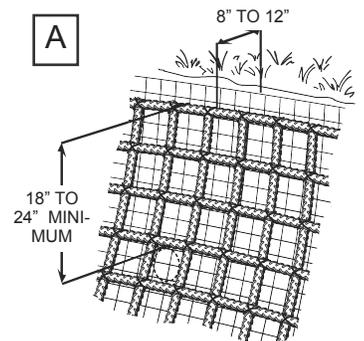

INSTALLATION INSTRUCTIONS FOR SP0607U

FEATURES EXCLUSIVE TO SP0607U- FOR VINYL/FIBERGLASS POOLS:

1. Attractive, injection-molded Duralon™ face rim assembly for corrosion-free performance.
2. Fits all standard punch designs, no tooling modifications are required.
3. Incorporates the dependability of Hayward's proven wall panel sealing method.

A. FOR VINYL LINED METAL WALL, FIBERGLASS PANEL OR FIBERGLASS POOLS

1. If not pre-punched by factory, drill and cut out wall panel sections as per dimensions below:

METAL OR FIBERGLASS PANEL CUT-OUT
 CIRCULAR PANEL CUTOUT - 10 3/4" MAX. 10 5/8" MIN.
 DRILL OR PUNCH - TEN (10) 5/16" HOLES ON 11 1/2" B.C., SPACED 36°
 DRILL OR PUNCH - TWO (2) 1/4" HOLES ON 11 1/2" B.C. SPACED 180°

2. Insert shell through panel section from interior of pool, securing Grounding Bracket at TOP (12 O'clock). For fiberglass pools (without liner): Caulk rear side of shell flange with silicone or other suitable sealing compound prior to inserting shell through pool wall.
3. Align the securing screw holes (at top and bottom) of the shell with those of the wall panel and insert the two pan head securing screws through shell and panel. This step may be eliminated for fiberglass pools (without liner).
4. Align the holes of the backup rim with those on the exterior side of the wall panel and fasten the shell and backup rim to the wall panel with the two No. 13 x 5/8" self-tapping pan head securing screws. For fiberglass pools (without liner): Caulk front surface of backup rim prior to installing.
5. Align holes in gasket with holes in shell and affix to shell with small quantity of adhesive. Cement to hold gasket in place. (Two large holes in gasket will fit over the pan heads of the securing screws.)
6. If vinyl lined pool, install liner before proceeding with Step 7.
7. Align second gasket (not required for fiberglass pools without liner) and face plate and fasten tightly to shell assembly with ten (10) No. 13 x 1 1/4" flat-head self-tapping screws provided. Use a properly sized Phillips screwdriver to tighten these heavy-duty screws. (Note: Make sure that the two countersinks on the back of faceplate line up with the heads of the two securing screws.) If vinyl liner pool, pierce liner through faceplate holes one at a time prior to inserting screws. Secure DuraNiche™ to pool with screws following this sequence:




a. FACEPLATE b. GASKET c. VINYL LINER (OPTIONAL)
 d. GASKET e. DuraNiche™ f. POOL PANEL g. BACKUP RING

8. Be sure to follow pool manufacturer's instructions. If vinyl lined pool, cut out liner along inside edges of faceplate.




B. FOR WOOD OR FIBER PANEL VINYL LINER POOLS

1. Cut out wall panel to 12 3/8" maximum, 12 1/8" minimum O.D. (Approximately 1/8" larger than O.D. of backup ring).
2. Insert backup ring through circular hole, from rear of panel, and fasten to rear of panel with (6) brass wood screws of proper length (not furnished).
3. Insert shell through panel from interior of pool, securing Grounding Bracket at TOP (12 o'clock).
4. Align the two securing screw holes at top and bottom of the shell with those of the backup ring with two (2) No. 13 x 5/8" self-tapping pan head securing screws.




REFER TO STEPS 5 THROUGH 8 AS ABOVE.

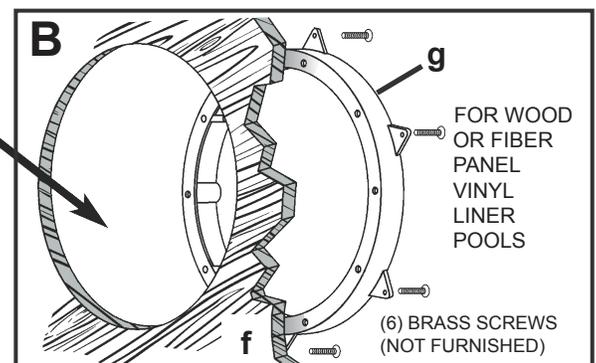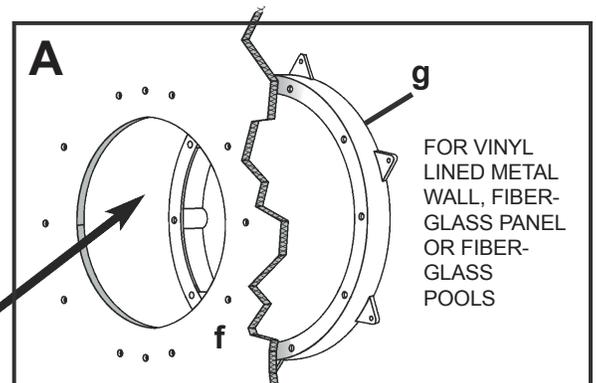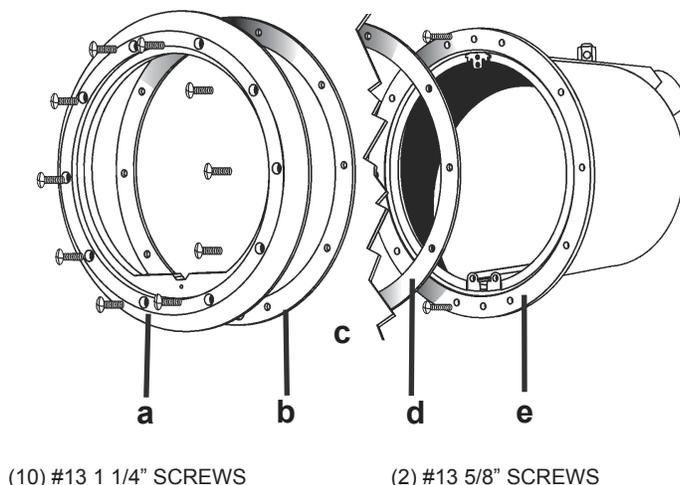



PRODUCT SPECIFICATIONS

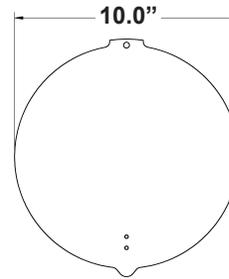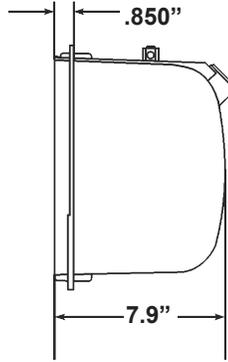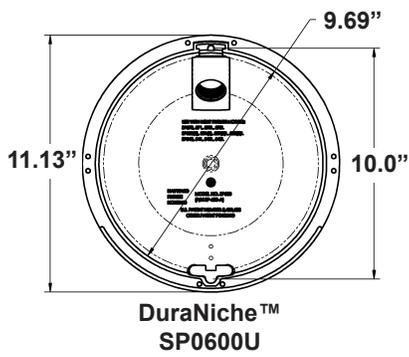

Niche Cover-SP0600J
SPX0555Z2- Bolts (1)

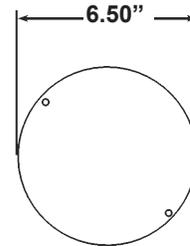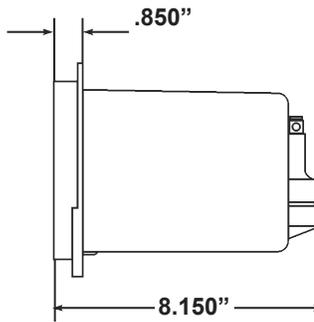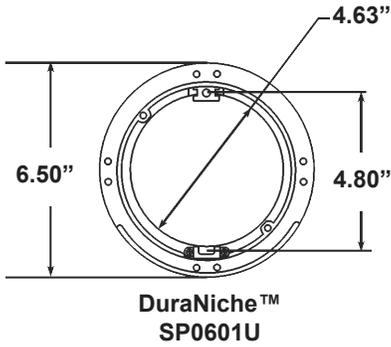

Niche Cover-SP0601N

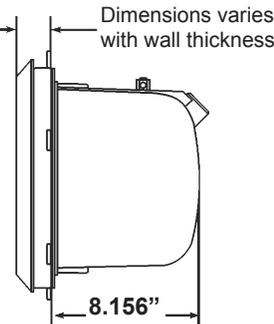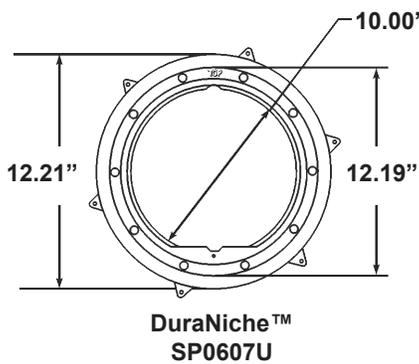

- SPX0507A1- Faceplate
- SPX0507D- Backup Ring
- SPX0506D- Gaskets (2)
- SPX0555Z2- Bolts (1)
- SPX0607Z1A- Screw Set 10 pcs. (1)

NOTE: These items are protected by the following patents:
#5.432.688. Other patents pending

HAYWARD® LIMITED WARRANTY

This equipment was inspected before shipment from our plant. To original purchasers of this equipment, Hayward Pool Products, 620 Division Street, Elizabeth, New Jersey, warrants its products free from defects in materials and workmanship for a period of **ONE (1)** year from the date of purchase.

Parts which fail or become defective during the warranty period, except as a result of freezing, negligence, improper installation, use, or care, shall be repaired or replaced, at our option, without charge, within 90 days of the receipt of defective product, barring unforeseen delays.

To obtain warranty replacements or repair, defective components or parts should be returned, transportation paid, to the place of purchase, or to the nearest authorized Hayward service center. For further Hayward dealer or service center information, contact Hayward customer service department. No returns may be made directly to the factory without the express written authorization of Hayward Pool Products

To original purchasers of this equipment, Hayward Pool Products warrants its vacuum release systems to be free from defects in materials and workmanship for a period of **ONE (1)** year from the date of purchase.

Vacuum Release Systems which become defective during the warranty period, except as a result of freezing, negligence, improper installation, use or care, shall be repaired or replaced, at our option, without charge.

All other conditions and terms of the standard warranty apply.

Hayward shall not be responsible for cartage; removal and/or reinstallation labor or any other such costs incurred in obtaining warranty replacements.

The Hayward Pool Products warranty does not apply to components manufactured by others. For such products, the warranty established by the respective manufacturer will apply.

Some states do not allow a limitation on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

PRODUCT REGISTRATION
(Retain For Your Records)

DATE OF INSTALLATION _____

▲ Retain this Warranty Certificate (upper portion) in a safe and convenient location for your records.

DETACH HERE: Fill out bottom portion completely and mail within 10 days of purchase/installation, OR REGISTER YOUR WARRANTY ONLINE AT WWW.HAYWARDNET.COM



Warranty Card Registration

Register your warranty on-line at www.haywardnet.com

Please print clearly.

First Name _____ Last Name _____

Street Address _____

City _____ State _____ Zip _____

Phone Number _____ Purchase Date _____

E-mail address _____

Serial Number (10-17 Digit Number)

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Model Number _____

Pool Capacity _____ (U.S. Gallons)

Please include me on all e-mail communications regarding Hayward equipment or promotions.

Years pool has been in service

1 year or less 2-3 4-5 6-10 11-15 >16

Purchased from _____

Builder Retailer Pool Maintenance Internet/Catalog

Company name _____

Address _____

City _____ State _____ Zip _____

Phone _____

Type of Pool:

Concrete/Gunite Vinyl Fiberglass Other _____

New Installation Replacement

Installation for:

Inground Aboveground Spa

Mail to: Hayward Industries, Inc. 620 Division Street, Elizabeth, NJ 07207,
Attn: Warranty Dept. or Register your warranty on-line at www.haywardnet.com

HAYWARD Pool Products
One source. Every pool.



USE ONLY HAYWARD GENUINE REPLACEMENT PARTS

Pomona, CA
Clemmons, NC

Nashville, TN
West Palm Beach, FL

North Kingstown, RI
Oakville, ON, Canada

St. Vulbas, France
Wuxi, China

www.haywardpool.com