



HAYWARD®



Quick Reference Guide

Hayward Variable Speed Pump

Default Speeds

SPEED 1	=	1000 rpm	QUICK CLEAN * 3450 rpm *Max allowed speed for 60mins
SPEED 2	=	1750 rpm	
SPEED 3	=	2500 rpm	
SPEED 4	=	3250 rpm	

NOTE: Factory default speeds are adjustable through configuration

Configuration Menu

- Push **MENU** until **Configuration Menu Locked** appears, then hold down **<** & **>** until you see: **Press > to enter**
- Press **>** to advance, **<** to back up
- Press **+** to edit items, flashing items are changed using the **+** or **-**



Timers Menu - Stand Alone


- Push **MENU** until **Timers Menu Press > to enter** appears, then press **>**
- **Timer1 1725rpm 12:00a to 11:45p 7D** use **+** to modify
- Push **+** to change timer name, then press **>** to advance
- Next set Timer speed **Timer1 1725rpm +/- adjust: times>** use **+** / **-** then press **>**
- **Timer1 1725rpm 12:00a to 11:45p** use **+** / **-** to modify start time, then **>** to adjust end
- Push **>** to view schedule days, use **+** / **-** to modify, then **>** to review
- Repeat this process until all desired timers are set
- To save changes, press **MENU** to exit, and then **+** to save

Quick Reference Guide

Connecting Pump to Hayward Automation

Consult controller manual for compatibility AND to select appropriate pump address

1. Connect with 18 gauge (300V), two conductor, shielded cable

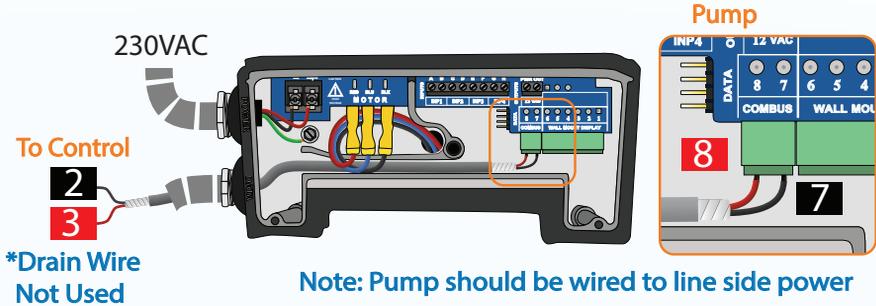

2. Verify pump is configured for Hayward Control:

- Locate and unlock Configuration Menu (instructions on front)
- Press until

Remote Control Mode
Standalone/Hayward

 if shows "Relay Control"
press

- *3. Set pump address according to automation system configuration

- Press then to save any changes

***NOTE: If connecting pump to an OmniLogic, omit step 3 (shown above); instead, follow 3b-3c (shown below):**

- 3b. Locate the HUA (Hayward Unique Address):

- Push until

Diagnostic Menu
Press > to enter

 appears, use the until the HUA is displayed:

Comm Bus: Online
HUA:10-41-01-1C-A1

, record and go to step 3c

- 3c. When programming the pump through OmniLogic, select the HUA that matches the HUA number found on the pump

To take a closer look or see other Hayward products please go to:

www.hayward.com or call 1-800-432-8387



QRG3000VSP (Rev. C)